


How to cast concrete

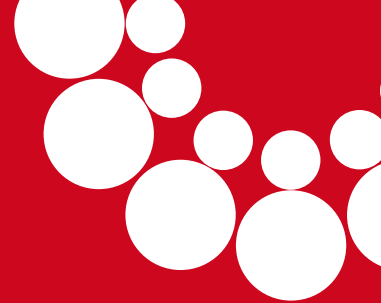

"How to make"



1.

1. Cover your clothes & skin. Mix 1 part water with 5 parts concrete for 5 mins. The mix should look like thick porridge. Add water/concrete as required.



2.

2. Add the concrete to the mould. Tap the mould lightly against the ground so the concrete fills all gaps.



3.

3. Let the concrete dry for at least 24 hrs, cover with a plastic sheet. Spray the concrete with water a couple of times when drying. Carefully remove the concrete from the mould when it is completely dry.